


Manual release instructions


Articulated motor



 These are the instructions to unlock your gate

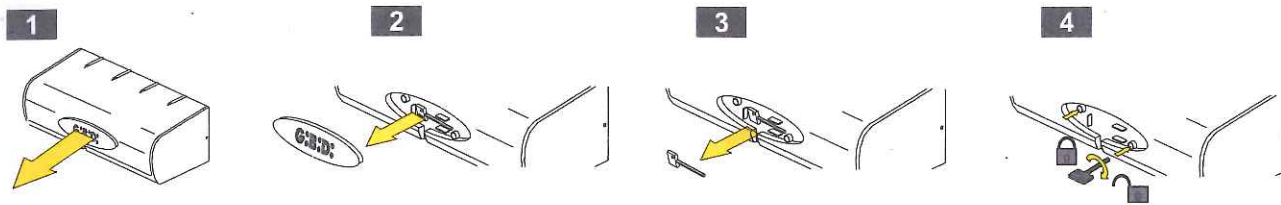

 **Warning!** Before unlocking the gate by hand, switch the main power off.

 **Warning!** Before unlocking the gate by hand, release the electric lock if fitted.

If the gate needs to be operated manually because of power failure or operator malfunctioning

Remove the cover [1] for access to the hexagonal key [2] , remove the same [3] insert the key into one of the two holes [4] , turn the key [4] clockwise until it stops, without forcing it. Now it is possible to carry out the manual manoeuvre.

To reset, turn the hexagonal key [4] anticlockwise until it stops without forcing. Remove the hexagonal key [4] , insert it into its housing [3] and replace the cover [2] .

To prevent the gate moving because of wind or because it is unbalanced, it is advisable, after having performed the manual emergency manoeuvre, to re-lock the operator.

 **Warning !** Move the gate at about the same speed of the automatic manoeuvre, higher speed could damage the automation system.