


## Manual release instructions


### Hydraulic motor



 These are the instructions to unlock your gate 

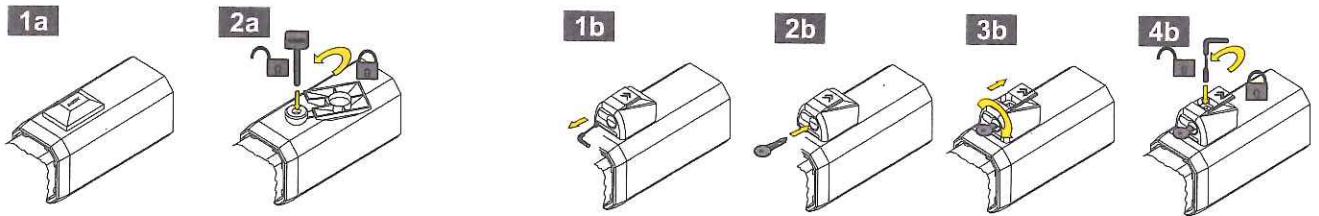

**Warning! Before unlocking the gate by hand, switch the main power off.**

 **Warning! Before unlocking the gate by hand, release the electric lock if fitted.**

If the gate needs to be operated manually because of power failure or operator malfunctioning:  
In the version without personalized key, rotate the protection cap [ 1 a ] and lift it, insert the unlocking key [ 2 a ] and rotate it [ 2 a ] anticlockwise by two turns, now it is possible to carry out the manual manoeuvre.

To reset turn the key [ 2 a ] clockwise until it stops without forcing it, then replace the cover cap into its original position.

In the version with personalized key, remove the hexagonal key [ 1 b ] , insert the personal key into the cylinder [ 2 b ] , turn it clockwise, push the cover tab [ 3 b ] in the direction indicated by the arrow, insert the hexagonal key [ 4 b ] , turn it [ 4 b ] anticlockwise by two turns, now it is possible to carry out the manual manoeuvre.

To reset turn the hexagonal key [ 4 b ] clockwise until it stops without forcing it, turn the key [ 3 b ] anticlockwise, replace the cover tab [ 3 b ] and the hexagonal key [ 1 b ] into its original position.

To prevent the gate moving because of wind or because it is unbalanced, it is advisable, after having performed the manual emergency manoeuvre, to re-lock the operator.

 **Warning ! Move the gate at about the same speed of the automatic manoeuvre, higher speed could damage the automation system.**