


## Manual release instructions


### Sliding motor



 These are the instructions to unlock your gate

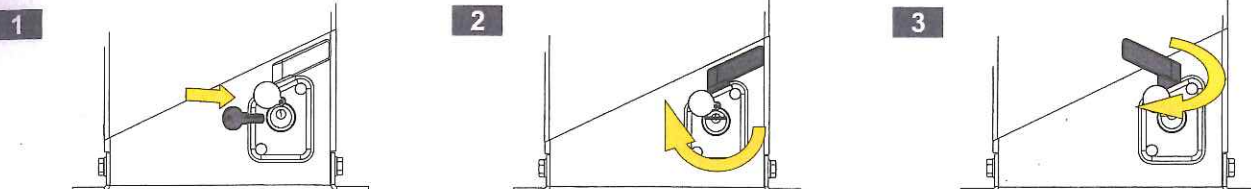

 **Warning!** Before unlocking the gate by hand, switch the main power off.

 **Warning!** Before unlocking the gate by hand, release any kind of external lock, if fitted.

If the gate needs to be operated manually because of power failure or operator malfunctioning:

Rotate the small cover [ 1 ], insert the key [ 1 ] and turn it clockwise [ 2 ], without forcing. The key will be pushed out a few millimetres by a spring. Then completely turn the handle [ 3 ] 180° towards the left. Now you can perform the door opening or closing manually.

To reset the system to the automatic operation, turn the handle [ 3 ] to its original position, push the key [ 2 ] forward, turn it anticlockwise, then remove it. N.B.: If the key [ 2 ] is not fully pushed forward, it will not be possible to turn it and then remove it.

To prevent the gate moving because of wind or because it is unbalanced, it is advisable, after having performed the manual emergency manoeuvre, to re-lock the operator.

 **Warning !** Move the gate at about the same speed of the automatic manoeuvre, higher speed could damage the automation system.